

SPARK LITE

Quick Start Guide

Search 'ZTE Australia' on Facebook ,
Google+ and Twitter to keep in touch.




Find us on
Facebook



ZTE © 2016 Version 1.0

Get to Know Your Phone

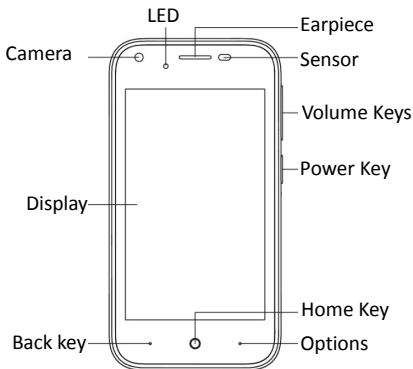

Using the Keys


| | |
|--------------------|---|
| Back key | Touch it to go back step by step. If the onscreen keyboard is open, touch it to close the keyboard. |
| Home key | Press to open the home screen. |
| Options | Touch to see the Options menu. Hold to view recent apps. |
| Power key | Press it to turn on/off the display. Long press it to open a menu with options for Flight mode, restarting the phone, and for powering off the phone. |
| Volume keys | In a call – adjust the in call volume At the idle screen – adjust the ring volume, long press it adjust the ring volume to maximum or minimum. Press to access the Interruptions panel. In media or games adjust the apps volume |

Starting Up

1. Open the back cover using the thumb slot in the bottom corner.



2. Hold the SIM card as shown and push it fully into the SIM slot.

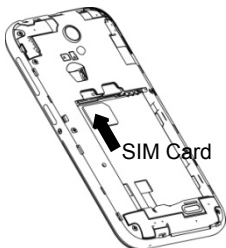

3. The microSD memory card is an optional accessory and can be used to expand your storage for photos and music.

4. Line up the connectors on the phone and the battery and fit the battery into the handset.
5. Close the back cover and press down all round.

Charge the Battery

Always insert the charger lead carefully.

Check the plug and socket are aligned correctly.

Do NOT use excessive force which may damage the USB port.

Be careful to avoid tripping on the lead whilst it is plugged in.

Physical damage to the USB port is not covered by warranty.



Apps

Press the Apps Tray icon to view all the Apps in the device.

Power On and Off




Press and hold the Power Key to turn on your phone.

When already on press the Power Key to light up your screen.


Press and hold the Power Key to open the options menu, touch Power off.

Make Calls


Make a call using the Dialer

On the home screen, touch the  button to open the Dialer. Touch a recently called number or press  to open the Dial Pad and touch  to make the call.

Make a call from Contacts


On the home screen, touch the  icon, touch the desired contact and touch the phone number to dial it.

Make a call from Call logs

On the home screen, touch the  button, the call log tab shows recent calls. Touch the phone icon in a call log to return it.

Answer a call


Your phone will ring or vibrate (depends on the current mode and settings) for an incoming call.

Slide the  icon from middle to the right to answer calls.


If you are using another application press the **Answer** or **Reject** button displayed at the top of the screen.

If you accidentally dismiss this panel, pull down the Notifications Panel to retrieve the Answer Call panel.

- If the earphone is inserted, press the key on the earphone to answer the call.

Touch the  button to hang up the call.


Reject a call


Slide the  icon from middle to left to reject the call.


Adjust the volume

In a call, you can raise or lower the volume by using the volume keys.

Messages

1. Go to Messages and touch the  icon
2. Input your desired telephone number or name

You can also touch the  button to select a contact from the **People** and then touch **OK** icon to add a contact.

3. Touch the  icon attach pictures, videos or audio file to send a multimedia message.

Connect to a Computer to transfer files

Transfer audio, video and picture files between your handset and your computer.

For a PC select Install driver on the handset notifications window then open the CD Drive: USB_Driver and run Setup to install the handset drivers.

Subsequently, select Media Device (MTP) from the notifications window, which will open the handset in Windows Explorer.

For a MAC download and install Android

File Transfer from Android.com

Connect your handset using the USB data lead supplied.

Select Media Device (MTP) from the notifications window, which will open the handset on your MAC.

TIPS

For general usage of the Android operating system there are many guides available online.

Pull down from the top of the screen twice to access the Quick Settings panel and press the cog wheel at the top for Settings.

All Google apps use the three dots for Options in the app.

Press Options or long press on the Homescreen to add widgets or change the wallpaper to customise your device.

Drag and drop an app from the apps tray to the Homescreen as a quick shortcut to the app.

New apps downloaded from Play Store will be added to the Homescreen automatically.