Blade S6

Quick Start Guide

LEGAL INFORMATION

Copyright © 2015 ZTE CORPORATION.

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

Trademarks

ZTE and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc. The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

Other trademarks and trade names are the property of their respective owners.

Download the user guide from

http://www.ztemobiles.com.au

Visit ztemobiles.com.au for more support options, FAQ's and our on-line forum.

Search ZTE Australia to follow us on social media for the latest news, tips and support at the following sites:

Facebook

Twitter

Google +

You Tube

Instagram


This device has a non replaceable battery. To perform a power reset hold down the power key for 10 seconds to restart the phone.

Disclaimer


ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Product Safety Information

i roddot odioty imormation	
Do not use hand-held while driving	
Do not use while re-fuelling	
For body-worn operation maintain a separation of 15 mm	
This device may produce a bright or flashing light	
Small parts may cause a choking hazard	
Do not dispose of it in a fire	
This device may produce a loud sound	
To prevent possible hearing damage, do not listen at high volume levels for long periods.	
Avoid contact with magnetic media	

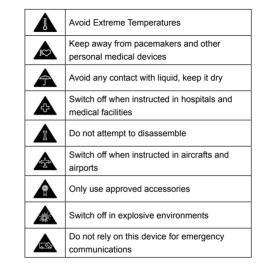

Getting to Know Your Phone

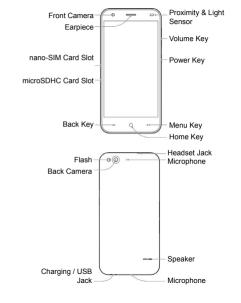

Power Kev

- Press and hold to turn on or off airplane mode, enable silent mode, vibration mode or sound, reboot, or to power off.
- Press to switch your phone to sleep mode or wake it up.

Volume Key

Press and hold to turn the volume up or down.

Home Key

- Touch to return to the home screen from any application or screen.
- Touch and hold to start Google Search.

Back Key

Touch to go to the previous screen.

Menu Key

- Touch to open launcher menu.
- Touch and hold to see recently used applications.

Before Getting Started

Installing the nano-SIM Card

Switch off your phone before installing the nano-SIM card.

Using the thimble take out the card holder.



Hold the nano-SIM card with the cut corner oriented as shown and slip it into the card holder.



CAUTION: To avoid damage to the phone, please do not use other kinds of SIM cards, and do not use a non-standard nano-SIM card cut from a SIM card. You can get the standard nano-SIM card from your service provider.

Installing the microSDHC Card

Using the thimble take out the card holder.



Hold the microSDHC card with the cut corner oriented as shown and slip it into the card holder.



Charging the Battery



When you first get your new phone you'll need to charge the battery like this:

- Connect the adapter to the charging lack.
- 2. Connect the charger to a standard AC power outlet.
- Disconnect the charger when the battery is fully charged.

WARNING! Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your phone or cause the battery to explode.

CAUTION: Do not change the built-in rechargeable battery in your phone by yourself. The battery can only be changed by ZTE or ZTE authorised service provider.

NOTE: If the battery is extremely low, you may be unable to power on the phone even when it is being charged. In this case, try again after charging the phone for at least 10 minutes. Contact customer service if you still cannot power on the phone after prolonged charging.

Powering On/Off Your Phone

Make sure the battery is charged before powering on.

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the Power Key to open the options menu. Touch Power off.

Waking Up Your Phone

- . Press the **Power Key** to activate your screen display.
- 2. Swipe from the bottom to up to unlock.

NOTE:

If you have set an 'unlock pattern', or a PIN/password for your phone, you'll need to draw the pattern or enter the PIN/password to unlock your screen.

Using the Touch Screen

Your phone's touch screen lets you control actions through a variety of touch gestures.

Touch

When you want to type using the onscreen keyboard, select items onscreen such as application and settings icons, or press onscreen buttons, simply touch them with your finger.

Touch and Hold

To open the available options for an item (for example, a message or link in a Web page), touch and hold the item.

Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

Pinch

In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in).

Rotate the screen

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the phone sideways.